


Superheat and Subcooling Head for R22 and R410A with pipe clamp thermocouple

Model: ASX14

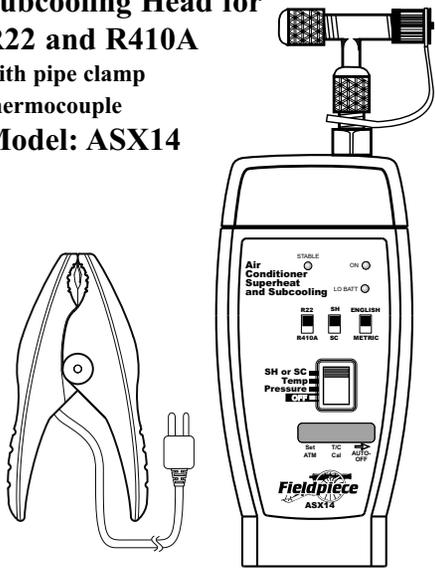


OPERATOR'S MANUAL

Description

The model ASX14 superheat and subcooling accessory head measures refrigerant pressure and temperature simultaneously. It then calculates and displays superheat or subcooling. It has a 1/4" industry standard fitting for actual pressure. A pipe clamp thermocouple is included for temperature. Select R22 or R410A. Select superheat or subcooling. Select English or metric units.

Use it your way

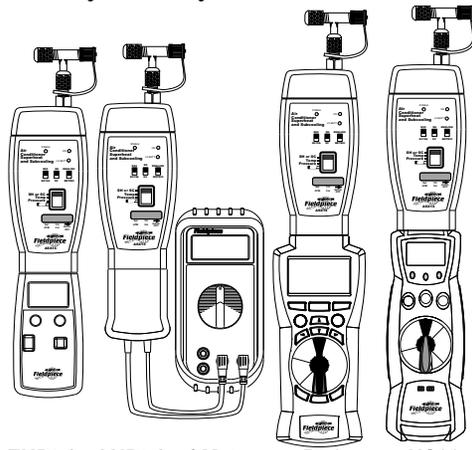

EHDL1 AHDL1 w/ Meter DL3 HS30

How to use

1. Connect to COM and Volts jack. Slide ASX14 superheat head onto Fieldpiece "stick" meter, data logger, electronic handle or connect to most other meters using Fieldpiece ADLS2 deluxe test leads or AHDL1 handle.
2. Set meter to mVDC range.
3. Calibrate if needed (see Field calibration)
4. Hand tighten 1/4" flare to suction line or liquid line as close to the evaporator or condenser as possible using an EPA approved service hose (not included).
5. Select superheat or subcooling, refrigerant (R22 or R410A) and units (English or metric).
6. Connect the pipe clamp to the suction (superheat) or liquid (subcooling) line at least six inches from the condenser and slide it under the insulation for best accuracy isolating the pipe clamp from the ambient air (pg. 2).
7. Select parameter to display (superheat, subcooling, pressure, or temperature).
8. You must wait until the system you are testing has stabilized. The STABLE LED lights when the reading is stable.
9. Disable Auto-off to data log any of the above parameters with the DL3 data logger.
10. Once you have the superheat or subcooling reading follow the manufacturer of the air conditioner's specifications to properly charge or diagnose the system.

Field calibration

Temperature: To calibrate the system (ASX14, pipe clamp thermocouple, meter), adjust the calibration pot underneath the rubber covering while measuring a known temperature. Ice water is 32°F (0°C) and is readily available.

1. Stabilize (by repeated stirring) a large cup of ice water.
2. Select temperature on ASX14, plug in the pipe clamp thermocouple and then immerse entire clamp into the ice water (keep stirring).
3. Adjust the calibration pot to read 32.0 (0.0 if using °C) on the DMM for optimum accuracy at room temp.

Pressure: The pressure/vacuum reading prior to connecting to an A/C system should always be zero. If you see that you're getting pressure readings of something other than zero without your service hose attached, you need to set atmospheric pressure before connecting the ASX14 to the system. To set atmospheric pressure, press the button underneath the rubber covering entitled "Set ATM". You usually have to set atmospheric pressure each time you dramatically change elevations. For example, if you "Set ATM" in Denver and take a pressure reading of an A/C system in Los Angeles, the pressure reading in Los Angeles will be lower than it actually is.

SPECIFICATIONS

Connector type: Standard 1/4" male flare fitting

Operating environment: 32°F to 122°F; 0°C to 50°C at <75%RH

Allow ~5 min. for ASX14 to come to ambient temp.

Storage environment: -4°F to 140°F; -20°C to 60°C at <80%RH with battery removed.

Battery life: 25 hours typical. No measurable current draw when in "off" position.

Low battery indication: Red LED lights

Battery: 9V

Auto off: Approx. 15 minutes

Overloads: The ASX14 outputs 3.4V when temperature or pressure is outside of their working range (overloaded). For ranges below 3400mVDC, the normal overload symbol will be displayed on the meter ("OL"). For ranges above 3400mVDC, reading displayed will be approximately 3.4VDC.

Stated Accuracy: at 73°F ± 9°F (23°C ± 5°C), <90% R.H.

Temperature

Sensor type: Type K thermocouple

Range (temperature): -40°F to 400°F; -40°C to 204°C

Resolutions: 0.1°

System Accuracy:

-40°F to 200°F, ±1°F*, -40°C to 93°C, 0.6°C
201°F to 400°F, ±2°F*, 94°C to 204°C, ±1.2°C

*After ice water calibration (see Field calibration)

Pipe clamp thermocouple accuracy: ±4°F (±2°C) or ±0.75%, whichever is greater, -30°F to 200°F (-34°C to 93°C)

Pressure and vacuum

Working range (pressure):

0 to 500 psig; 0 to 3447 kPa

Max displayed pressure: 800 psig (5500 kPa)

Working range (vacuum):

29" HgV to 0; 74 cmHgV to 0

Vacuum will show up as negative value on meter.

Resolutions: 0.1 psig or kPa, 0.1" HgV or cmHgV

Accuracy:

29" HgV to 0, ±0.2" HgV, 74 cmHgV to 0, ±0.4 cmHgV

0 to 200 psig, ±1 psig, 0 to 1378 kPa, ±6.9 kPa;
200 to 500 psig, 0.3% ±1 psig, 1378 to 3447 kPa, 0.3% ±6.9 kPa

Sensor breakdown pressure: 800 psig (5500 kPa)

Warranty

The ASX14, Superheat and Subcooling accessory head is warranted against manufacturer's defects for one year. This warranty does not apply to defects resulting from abuse, neglect, accident, unauthorized repair, alteration, or unreasonable use of the instrument. Any implied warranty arising out of the sale of Fieldpiece's products including but not limited to implied warranties of merchantability, and fitness for purpose, are limited to the above. Fieldpiece shall not be liable for incidental or consequential damages.

Service

Return any defective ASX14 to Fieldpiece for warranty service along with proof of purchase. Contact Fieldpiece for out of warranty repair charges.

Fieldpiece
Designed in USA
MADE IN TAIWAN

Measuring actual superheat and subcooling

Superheat is the difference between the actual temperature of the refrigerant (gas) as it leaves the evaporator and the boiling point temperature of the refrigerant in the evaporator coil. After boiling, the refrigerant continues to warm up. The number of degrees it "warmed up" after boiling is called the superheat. Under worst case conditions (low load for fixed orifice systems), the refrigerant in the evaporator boils off near the end of the evaporator coil. To make sure liquid doesn't enter the compressor under the worst case condition (low load), the AC manufacturers publish charts indicating what the superheat should be at a given indoor wet bulb measurement and outdoor air temperature.

Measuring superheat is your best indication on a fixed orifice system of the proper refrigerant charge and operating conditions. If everything else is working properly and the actual superheat is too high, add refrigerant. If it's too low, remove refrigerant.

Subcooling is the difference between the boiling point of the refrigerant in the condenser and the actual temperature of the refrigerant as it leaves the condenser. The degrees that the refrigerant "cools down" below the boiling point is the subcooling. Under worst case scenario (low load for TXV) the subcooling will continue to rise. If the subcooling rises to high, liquid may be backed into

the compressor causing damage and catastrophic failure.

On TXV systems, subcooling is the best indication of the state of charge in the refrigerant system since these systems are designed to maintain constant superheat.

Properly charging a system ensures maximum efficiency and longer equipment life.

The hose must have a schraeder valve depresser on one end to release the refrigerant from the suction or liquid line. This is the same type of hose available with most pressure gauge sets. We suggest EPA sanctioned "no leak" hoses.

Exercise caution whenever working with any electricity and high pressure liquid or gas. Follow all instructions provided with equipment being serviced or installed.


Target superheat and subcooling

Heed all equipment manufacturer's specifications, warnings and suggestions above anything found in this manual.

To determine the target superheat (fixed orifice system) or subcooling (charts vary dramatically from one system to another), you will typically need three things. Outdoor dry bulb (outdoor air temperature), indoor wet bulb, and the manufacturers target superheat chart or subcooling chart.

You can use the ARH4 Fieldpiece accessory

head for both indoor wet bulb and outdoor dry bulb. Or you can use any Fieldpiece meter that has a temperature function along with a ATWB1 wet bulb thermocouple. Below is a diagram of the ASX14 on a split-system residential A/C unit.

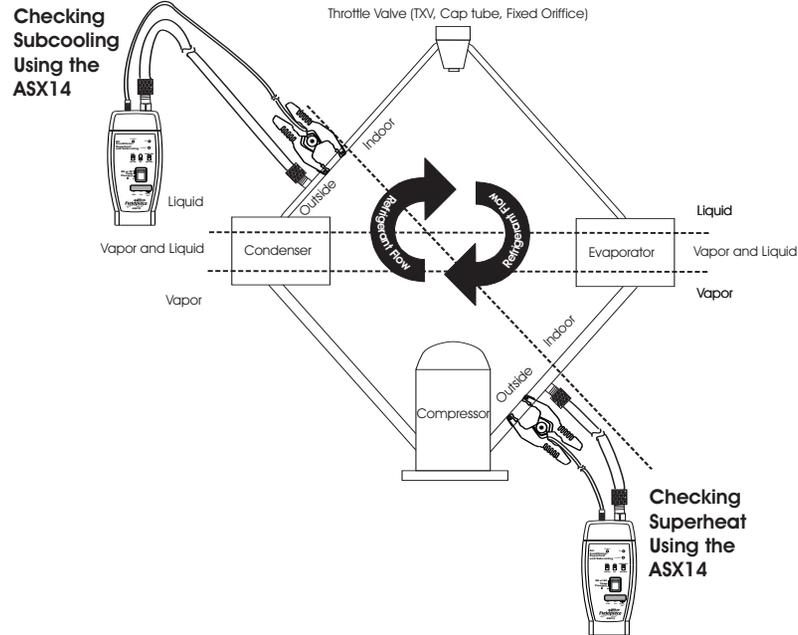

Generic Target Superheat Charts*

		Target Superheat °F																													
		Return Air Wet-Bulb Temperature																													
Condenser Air Dry-Bulb Entering Temperature °F		50	52	54	56	58	60	62	64	66	68	70	72	74	76	Target Superheat °C															
		10.0	11.1	12.2	13.3	14.4	15.6	16.7	17.8	18.9	20.0	21.1	22.2	23.3	24.4	13.3	14.4	15.6	16.7	17.8	18.9	20.0	21.1	22.2	23.3	24.4					
	56		8.6	11.2	14.0	16.8	19.7	22.7	25.7	28.9	31.8	34.6	37.2	39.7	42.2	44.6	4.8	6.2	7.8	9.3	10.9	12.6	14.3	16.0	17.7	19.2	20.7	22.1	23.4	24.8	
	58		7.9	10.6	13.4	16.1	19.0	21.9	24.8	27.8	30.7	33.5	36.1	38.7	41.3	43.7	4.4	5.9	7.4	9.0	10.5	12.1	13.8	15.4	17.1	18.6	20.1	21.5	22.9	24.3	
	60		7.0	9.8	12.6	15.4	18.2	21.0	23.8	26.6	29.5	32.4	35.1	37.8	40.4	42.9	3.9	5.4	7.0	8.5	10.1	11.7	13.2	14.8	16.4	18.0	19.5	21.0	22.4	23.8	
	62		5.9	8.8	11.7	14.5	17.3	20.0	22.8	25.5	28.4	31.3	34.1	36.8	39.4	42.0	3.3	4.9	6.5	8.0	9.6	11.1	12.7	14.2	15.8	17.4	18.9	20.4	21.9	23.3	
	64			7.6	10.6	13.5	16.3	19.0	21.7	24.4	27.3	30.2	33.0	35.8	38.5	41.2	1.8	4.2	5.9	7.5	9.0	10.6	12.1	13.5	15.2	16.8	18.4	19.9	21.4	22.9	
	66			6.3	9.3	12.3	15.2	18.0	20.7	23.2	26.1	29.1	32.0	34.9	37.6	40.3	1.9	3.5	5.2	6.8	8.4	10.0	11.5	12.9	14.5	16.2	17.8	19.4	20.9	22.4	
	68				7.9	11.1	14.0	16.8	19.5	22.1	25.0	28.0	31.0	33.9	36.7	39.5	2.0	4.4	6.1	7.8	9.4	10.9	12.3	13.9	15.6	17.2	18.8	20.4	22.0	23.6	
	70				6.4	9.7	12.7	15.6	18.4	20.9	23.9	27.0	30.0	33.0	35.9	38.7	2.1	3.6	5.4	7.1	8.7	10.2	11.6	13.3	15.0	16.7	18.3	19.9	21.5	23.1	
	72					8.1	11.4	14.4	17.2	19.7	22.8	25.9	29.0	32.0	35.0	37.9	2.2	4.5	6.3	8.0	9.5	11.0	12.6	14.4	16.1	17.8	19.4	21.1	22.7	24.3	
	74					6.5	9.9	13.1	15.9	18.6	21.6	24.8	28.0	31.1	34.1	37.1	2.3	3.6	5.5	7.3	8.9	10.3	12.0	13.8	15.5	17.3	19.0	20.6	22.2	23.8	
	76					8.4	11.7	14.7	17.4	20.5	23.8	27.0	30.1	33.3	36.3	39.3	2.4	4.6	6.5	8.2	9.6	11.4	13.2	15.0	16.7	18.5	20.2	21.9	23.5	25.1	
	78					6.7	10.2	13.4	16.2	19.4	22.7	26.0	29.2	32.4	35.6	38.8	2.5	3.7	5.7	7.4	9.0	10.8	12.6	14.4	16.2	18.0	19.8	21.5	23.2	24.9	
	80						8.7	12.0	15.0	18.3	21.7	25.0	28.3	31.6	34.8	38.0	2.6	4.8	6.7	8.3	10.2	12.0	13.9	15.7	17.5	19.3	21.1	22.8	24.5	26.2	
	82						7.1	10.6	13.7	17.2	20.6	24.0	27.4	30.7	34.0	37.3	2.7	4.9	5.9	7.6	9.5	11.4	13.3	15.2	17.1	18.9	20.7	22.5	24.3	26.1	
84							5.5	9.2	12.5	16.1	19.6	23.0	26.5	29.9	33.3	2.8	5.0	6.9	8.9	10.9	12.8	14.7	16.6	18.5	20.4	22.2	24.0	25.8	27.6		
86								7.8	11.3	15.0	18.5	22.1	25.6	29.1	32.6	2.9	5.1	7.0	9.0	11.0	13.0	15.0	17.0	19.0	21.0	23.0	25.0	27.0	29.0		
88								6.3	10.0	13.9	17.5	21.1	24.7	28.3	31.8	3.0	5.2	7.2	9.2	11.2	13.2	15.2	17.2	19.2	21.2	23.2	25.2	27.2	29.2		
90									8.7	12.8	16.5	20.1	23.8	27.5	31.1	3.1	5.3	7.4	9.4	11.4	13.4	15.4	17.4	19.4	21.4	23.4	25.4	27.4	29.4		
92									7.5	11.7	15.4	19.2	22.9	26.7	30.4	3.2	5.4	7.5	9.5	11.5	13.5	15.5	17.5	19.5	21.5	23.5	25.5	27.5	29.5		
94									6.2	10.6	14.4	18.2	22.1	25.9	29.7	3.3	5.5	7.6	9.6	11.6	13.6	15.6	17.6	19.6	21.6	23.6	25.6	27.6	29.6		
96										9.5	13.4	17.3	21.2	25.1	29.0	3.4	5.6	7.7	9.7	11.7	13.7	15.7	17.7	19.7	21.7	23.7	25.7	27.7	29.7		
98										8.4	12.4	16.4	20.3	24.3	28.3	3.5	5.7	7.8	9.8	11.8	13.8	15.8	17.8	19.8	21.8	23.8	25.8	27.8	29.8		
100										7.3	11.4	15.4	19.5	23.6	27.7	3.6	5.8	7.9	9.9	11.9	13.9	15.9	17.9	19.9	21.9	23.9	25.9	27.9	29.9		
102										6.2	10.3	14.5	18.6	22.8	27.0	3.7	5.9	8.0	10.1	12.2	14.3	16.4	18.5	20.6	22.7	24.8	26.9	29.0	31.1		
104										5.1	9.3	13.6	17.8	22.1	26.3	3.8	6.0	8.1	10.2	12.3	14.4	16.5	18.6	20.7	22.8	24.9	27.0	29.1	31.2		
106											8.3	12.6	17.0	21.3	25.7	3.9	6.1	8.2	10.3	12.4	14.5	16.6	18.7	20.8	22.9	25.0	27.1	29.2	31.3		
108											7.3	11.7	16.1	20.6	25.1	4.0	6.2	8.3	10.4	12.5	14.6	16.7	18.8	20.9	23.0	25.1	27.2	29.3	31.4		
110											6.4	10.8	15.3	19.9	24.4	4.1	6.3	8.4	10.5	12.6	14.7	16.8	18.9	21.0	23.1	25.2	27.3	29.4	31.5		
112											5.4	9.9	14.5	19.1	23.8	4.2	6.4	8.5	10.6	12.7	14.8	16.9	19.0	21.1	23.2	25.3	27.4	29.5	31.6		
114												9.0	13.7	18.4	23.2	4.3	6.5	8.6	10.7	12.8	14.9	17.0	19.1	21.2	23.3	25.4	27.5	29.6	31.7		

* These charts are an example of a generic superheat charts for a typical fixed orifice, split residential system. These charts should not be used for charging. A typical manufacturer's recommended subcooling is 12°F (7°C). These are only examples of what the manufacturer's may recommend. Heed all manufacturer's indications, instructions and warnings above those in this manual.

The indoor wet bulb measurement can be accomplished by a Fieldpiece ARH4 or ATWB1 and should be taken as close to the evaporator coil inlet as possible. The outdoor dry bulb reading can be taken with an ARH4, ATB1, ATA1 or any other Fieldpiece air thermocouple and should be taken as close to the condenser air inlet as possible.