 


# Fieldpiece®

## Job Link® System Flex Psychrometer Probe

### OPERATOR'S MANUAL

Model JL3RH

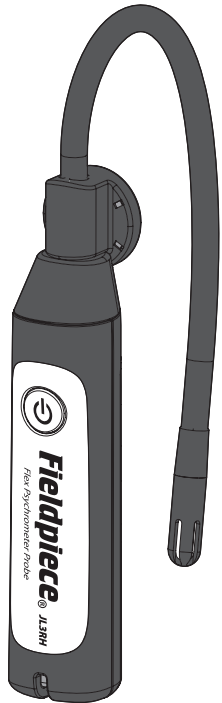

www.fieldpiecejoblink.com

## Quick Start

- 1 Install the Fieldpiece Job Link® system app on your mobile device and sign up for an account if you're a new user.
- 2 Remove the single screw of the yellow battery cover and install 2 x AAA batteries.
- 3 Press  for 1 second to power on.
- 4 Open Measurements in the Job Link® app and favorite the probe to the tool manager.
- 5 Remove protective slip cover from tip.
- 6 View live measurements on your mobile device up to 1000 feet away.

## What's Included

Job Link® System Flex Psychrometer Probe  
1 Protective Slip Cover  
2 x AAA Batteries  
Operator's Manual  
1 Year Limited Warranty

### WARNING

Prevent damage, do not drill holes blindly into a plenum that houses the evaporator or heat exchanger.

## Description

The JL3RH Job Link® System Flex Psychrometer Probe sends air measurements directly to the Fieldpiece Job Link® app up to 1000' away.

Measure %RH, dry bulb, wet bulb, dew point, and enthalpy at a register/grille, in the duct, or just walking around. Bend the flexible probe and slide the magnet to conveniently configure the JL3RH to your situation.

The rubberized protective housing is both ergonomic and rugged for daily use. Flip the switch and app immediately knows which side of the system you're going to place your psychrometer probe.

Use the long wireless range, strong magnet, and flexible probe for quick and easy psychrometrics testing.

## Maintenance

**CLEANING:** Clean the exterior with a damp cloth. Do not use detergents or solvents. Do not touch the sensor.

**BATTERIES:** When the LED slow blinks Red, the batteries must be replaced. Ensure the power is OFF. Remove the single screw from the yellow battery cover. Install 2 x AAA batteries. Monitor battery life in the app's tool manager.

**SENSOR CARE:** Cover the sensor with the slip cover when not in use. Extreme conditions or exposure to solvent vapor may offset the RH sensor. To re-calibrate, place the sensor in a controlled environment of 75%RH and between 68°F - 86°F for a period of 24 hours. To create a 75%RH environment, add wet salt to a clean open container (bottle cap). Be careful to not let the solution touch the probe. Place this container and the probe in a large sealed bag at room temperature, undisturbed for 24 hours.

## Specifications

### Minimum Device Requirement:

BLE 4.0 devices running iOS® 7.0 or Android™ 5.0  
(Latest compatibility at [www.fieldpiece.com](http://www.fieldpiece.com))

**Battery Type:** 2 x AAA, NEDA 24A, IEC LR03

**Battery Life:** 150 hours typical alkaline. LED blinks red when battery replacement is needed.

**Auto Power Off:** 2 hours (APO can be disabled)

**Wireless Range:** 1000 feet (305 meters) line of sight.  
Obstructions affect distance.

**Radio Frequency:** 2.4 GHz

**Operating Environment:** -4°F to 122°F (-20°C to 50°C) at <75% RH

**Storage Temperature:** -4°F to 140°F (-20°C to 60°C), 0 to 80% RH  
(with batteries removed)

**Temperature Coefficient:** 0.1 x (specified accuracy) per 1.8°F  
(32°F to 64°F, 82°F to 122°F), per 1°C (0°C to 18°C, 28°C to 50°C)

**Weight:** 0.33 lbs (150 g)

**Flexible Probe:** 0.36" (9mm) diameter; 9.25" (235mm) length

**US Patent:** [www.fieldpiece.com/patents](http://www.fieldpiece.com/patents)

## Relative Humidity (%RH)

**Hysteresis:** ±1%RH typical (Excursion of 10% to 90% to 10%RH)

**Measurement Range:** 0%RH to 100%RH

**Accuracy:** (At 73.4°F (23°C))

±2.5% (10%RH to 90%RH); ±(5%) <10%RH, >90%RH

**Response Time:** 60 seconds typical for 90% of total range

## Temperature

**Measurement Range:** -40°F to 250°F (-40°C to 121°C)

**Accuracy:** ±1°F (32°F to 113°F), ±0.6°C (0°C to 45°C); ±2°F (-40°F to 32°F, 113°F to 250°F), ±1°C (-40°C to 0°C, 45°C to 121°C)

# Operation



Press for 1 second to power ON/OFF.

 
## LED Color Indications

Green slow blink: normal operation


Red slow blink: batteries need to be replaced

## Supply or Return Side Switch

The Job Link® system app knows which side you have selected for each probe. Select **Supply** air or **Return** air and place it on the system appropriately.

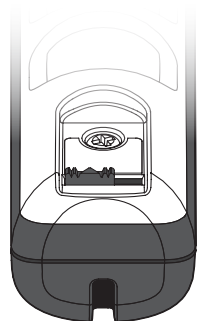

Supply Air  
(Cool Air)  
(Blue)

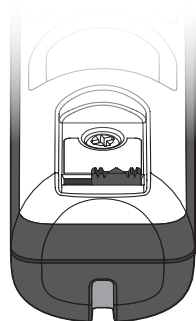 


Return Air  
(Warm Air)  
(Red)

## Magnetic Hanger

 You can slide the magnet to where you need it. Slide it to the top and reach high grilles/registers.

The magnet also holds the psychrometer in place when testing in duct air. Just bend the probe and slide into a 3/8" (10mm) hole in the duct.

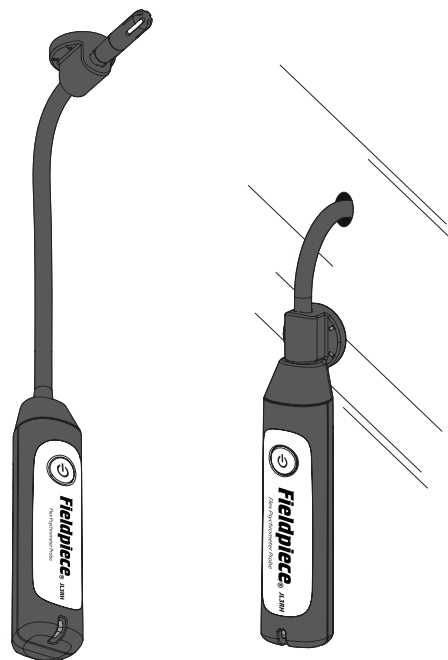

## Remote Data Logging

Use the Job Link® system app to program the JL3RH to log measurements starting at a specific time of day for up to 7 days. Auto power off disables.

- 1 Make sure JL3RH is powered OFF.
- 2 Open the Job Link® system mobile app.
- 3 Press for 5 seconds to enter data logging mode. The LED will shine solid green.
- 4 Set up the probe's data logging parameters within the app. The LED will blink green while the app is sending setup instructions. The LED will slow blink blue when waiting for programmed start time to occur.
- 5 Place the JL3RH on the system.
- 6 When the programmed start time is reached, the LED will very slowly blink green to indicate data logging has begun.
- 7 When the programmed span has finished, the LED blinks and powers OFF.
- 8 Repeat steps 1-3 and use the app to extract your data log from the JL3RH.

## Auto Power Off (APO)

The probe will automatically power off after 2 hours. To disable APO until powered off, while power is on tap twice. The LED will briefly blink red. To enable APO, while power is on tap twice. The LED will briefly shine red.

# Limited Warranty

This probe is warranted against defects in material and workmanship for one year from date of purchase from an authorized Fieldpiece dealer. Fieldpiece will replace or repair the defective unit, at its option, subject to verification of the defect.

This warranty does not apply to defects resulting from abuse, neglect, accident, unauthorized repair, alteration, or unreasonable use of the instrument.

Any implied warranties arising from the sale of a Fieldpiece product, including but not limited to implied warranties of merchantability and fitness for a particular purpose, are limited to the above. Fieldpiece shall not be liable for loss of use of the instrument or other incidental or consequential damages, expenses, or economic loss, or for any claim of such damage, expenses, or economic loss.

Local and national laws may vary. The above limitations or exclusions may not apply to you.

## Obtaining Service

Visit [www.fieldpiece.com/rma](http://www.fieldpiece.com/rma) for the latest information on how to obtain service in the U.S. and Canada.

For customers outside the U.S., warranty for products should be handled through local distributors.

Visit [www.fieldpiece-europe.com/store-locator](http://www.fieldpiece-europe.com/store-locator) for local distributors in Europe.

# Certifications



EN 300 328



UK Conformity Assessed



IC: Industry Canada



Regulatory Compliance Mark



Waste Electrical and Electronic Equipment



Restriction of Hazardous Substances Compliant

# FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- . Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

**FCC Radiation Exposure Statement:** This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 0.5 centimeters between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The antennas used for this transmitter must be installed to provide a separation distance of at least 0.5 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

# Industry Canada Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

 
L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.


**IC Radiation Exposure Statement:** This equipment complies with RSS-102 radiation exposure limit set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0.5 cm between the radiator and your body.

Cet équipement est conforme aux CNR-102 d'Industrie Canada. Cet équipement doit être installé et utilisé avec une distance minimale de 0.5 centimètres entre le radiateur et votre corps. Cet émetteur ne doit pas être co-localisé ou opérant en conjonction avec une autre antenne ou émetteur. Les antennes utilisées pour cet émetteur doivent être installées et fournir une distance de séparation d'au moins 0.5 centimètre de toute personne et doit pas être co-située ni fonctionner en conjonction avec une autre antenne ou émetteur.

# More HVACR Products from Fieldpiece

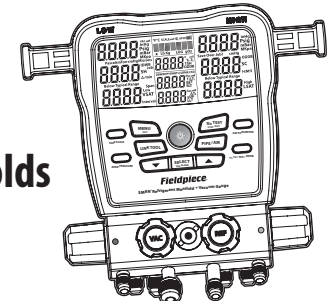


Digital Manifolds

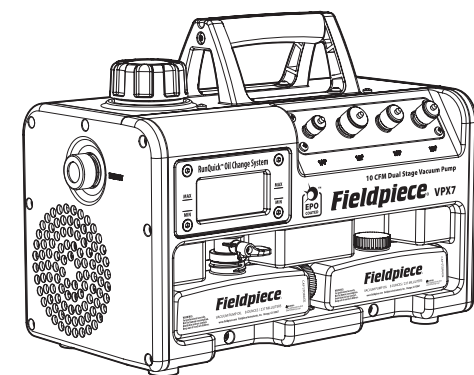 

Vacuum Pumps



 Vacuum Gauges & Job Link® System Probes

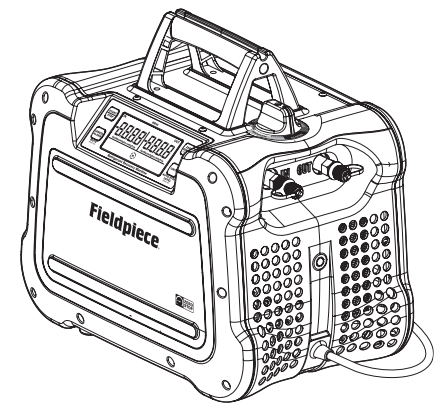

Refrigerant Recovery Machines